



MIST AI App (Installer Role)

Index	Page No
About	03
Installing the App	03
Getting started	04
User Login	05
Org List	06
AP Inventory	07
Claim AP to Org	09
Select Site	10
AP Detail	12

About

This guide will go over how to use the Mist AI app for the installer role while deploying AP on the floorplan.


- **Installer role:**
 - The installer has minimum access to the org.
 - They can do the initial installation such as claim AP to Org, assign AP to site, or place on map.
 - Users with installer access cannot unclaim or remove the AP from the Org.

Installing the App

Mist AI app is available for download on [Play Store](#) and [App Store](#). This app is compatible with the following devices:

- iPhone, iPod, and iPad with OS version 10 or later.
- Android phone and tablet with OS version 6.0 or later.

To download the app, navigate to the App store on the device, and search for MistAI. After download and install, click on the open or MistAI icon to start using the Mobile app.

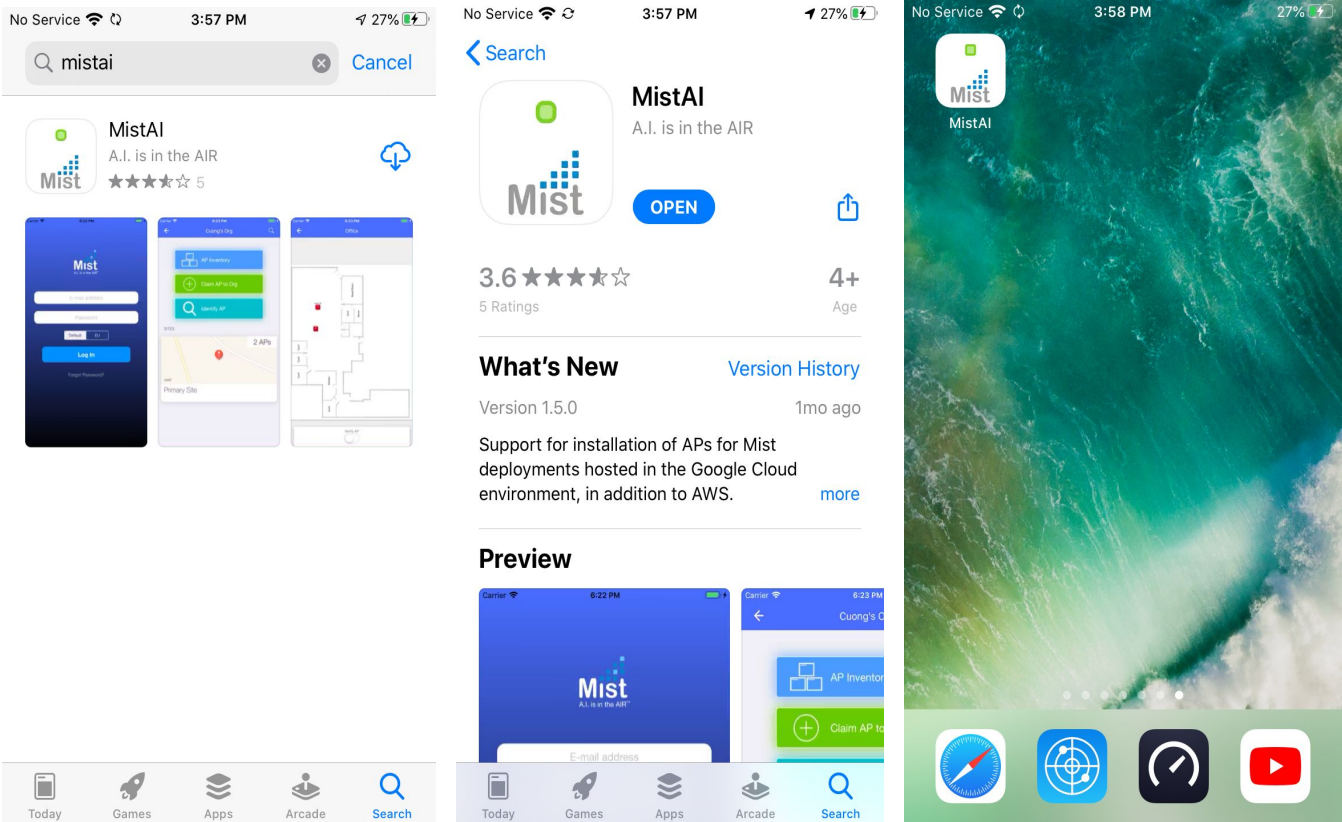

Search on AppStore, download and install the mobile app


Getting started with Mist

To start using the App, you need to create an account from the Mist UI portal. You can select the link depending on the deploying Organization(Org) environment. Please contact the Org admin or mist support to know the deployment org environment.

AWS - Production: <https://manage.mist.com/signin.html#!signin>

GCP - Production: <https://manage.gc1.mist.com/signin.html#!signin>

EU - AWS - <https://manage.eu.mist.com/signin.html#!signin>

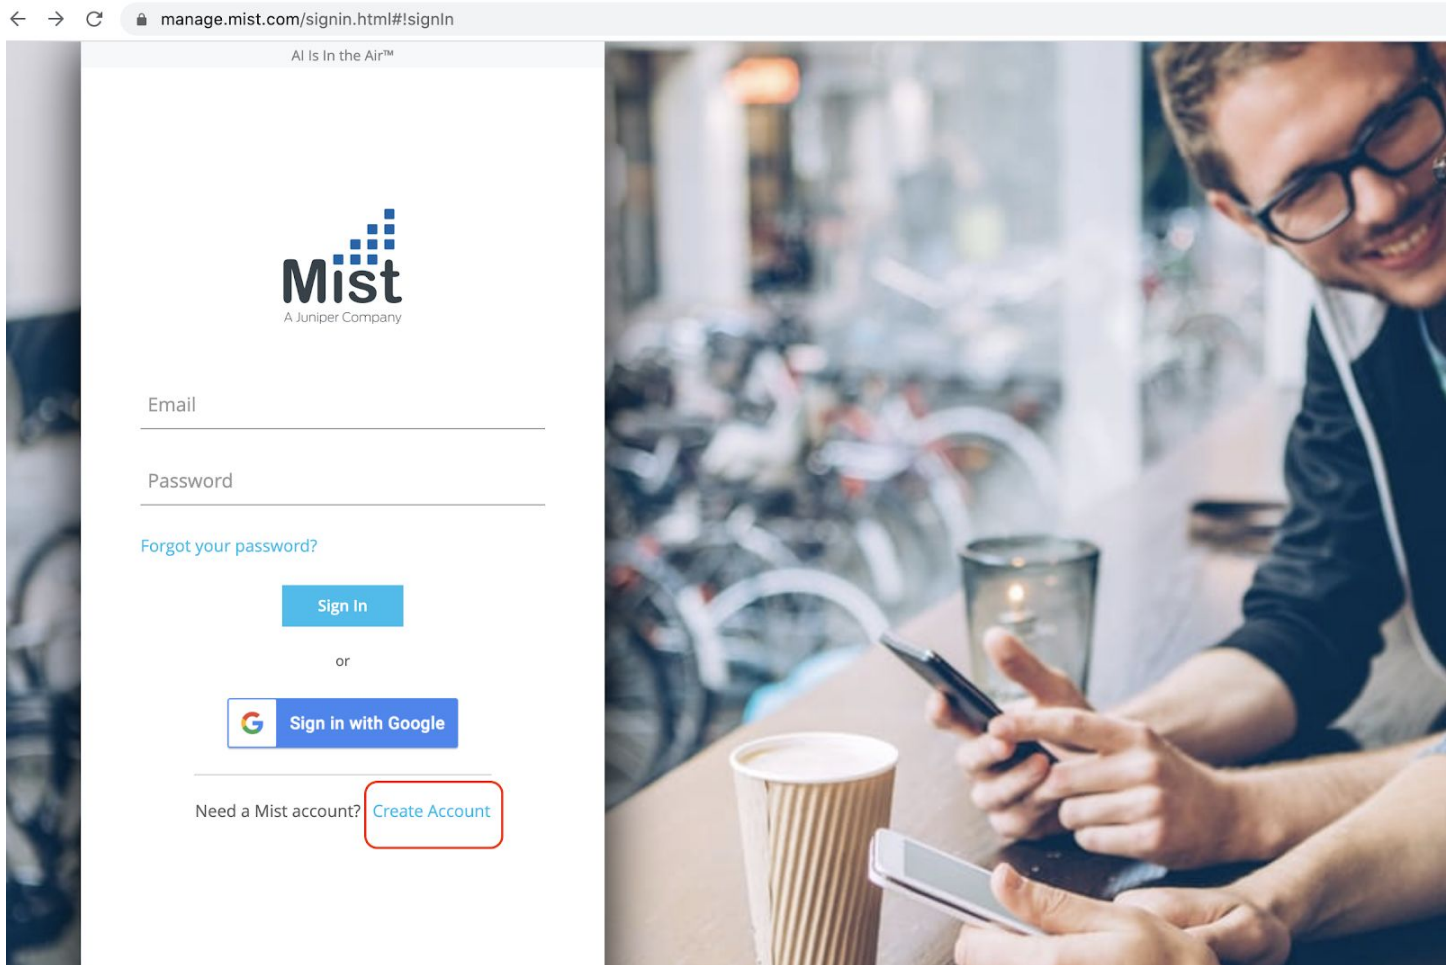


Note: you cannot register into Mist using MistAI App. You need to sign up on the weblinks shared above. As an installer, you will receive an invite to the deployment Org from the admin on your registered email id.

User Login

To login to the MistAI app, you should be registered on the mist account and have an invite from the admin to access the Org.

- 1. Select the environment. (Production-AWS/ Production-GCP/ EU-AWS)
- 2. Enter the registered email and password for the first time.
- 3. If 2FA is enabled on the Mist account, please use your authenticator app to verify the user device.
- 4. Next time, on login, you can use Touch ID/Face ID/Passcode to log in directly into the App.

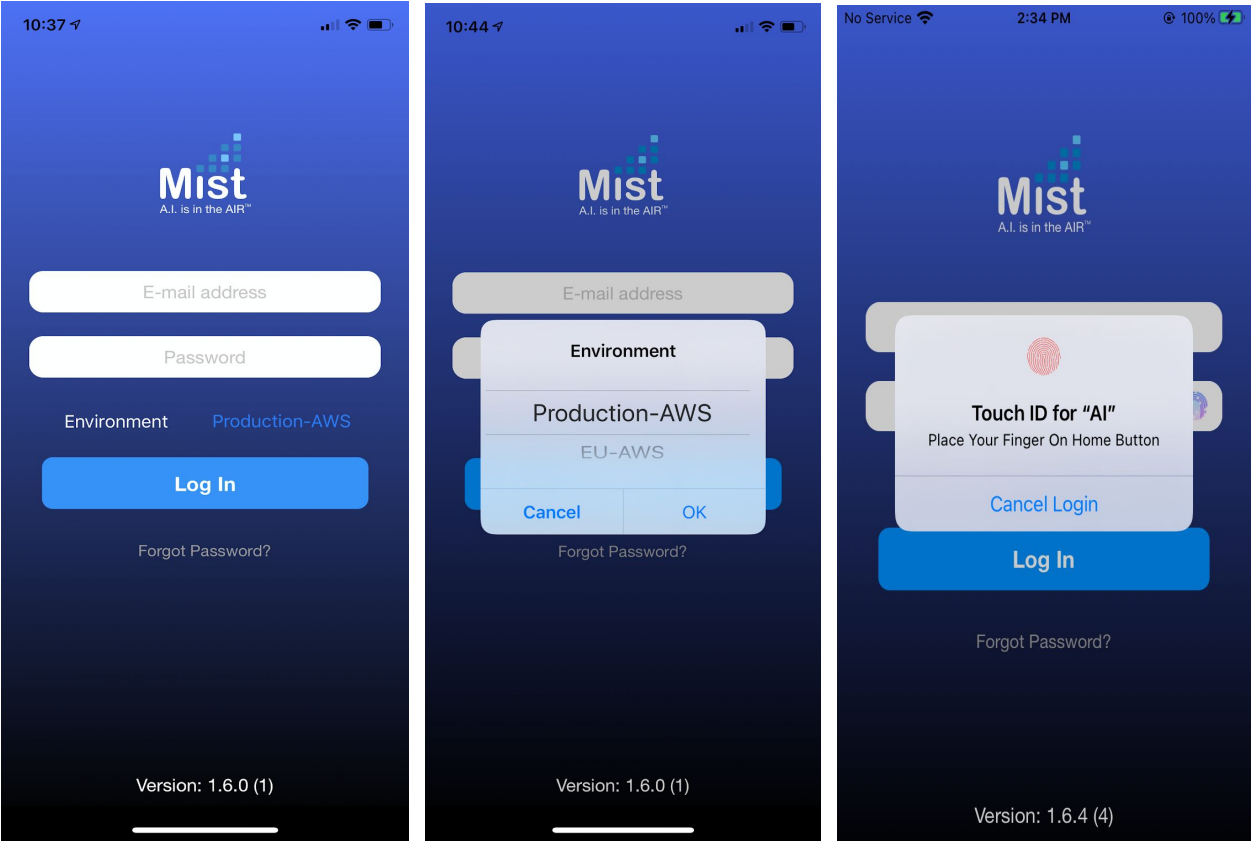


Select the environment and login into the mobile app

Note: Biometric authentication will work only if your device supports this feature and you have enabled it from device settings.

Org List

- Display a list of all the Orgs you have access to.
- Search for the Org you want to open. All Orgs on your account will be alphabetical order.
- Choose the org and you will be prompted at the home screen of the selected org. From here you can either go to AP inventory, Claim AP to Org, and Search/Select Sites.

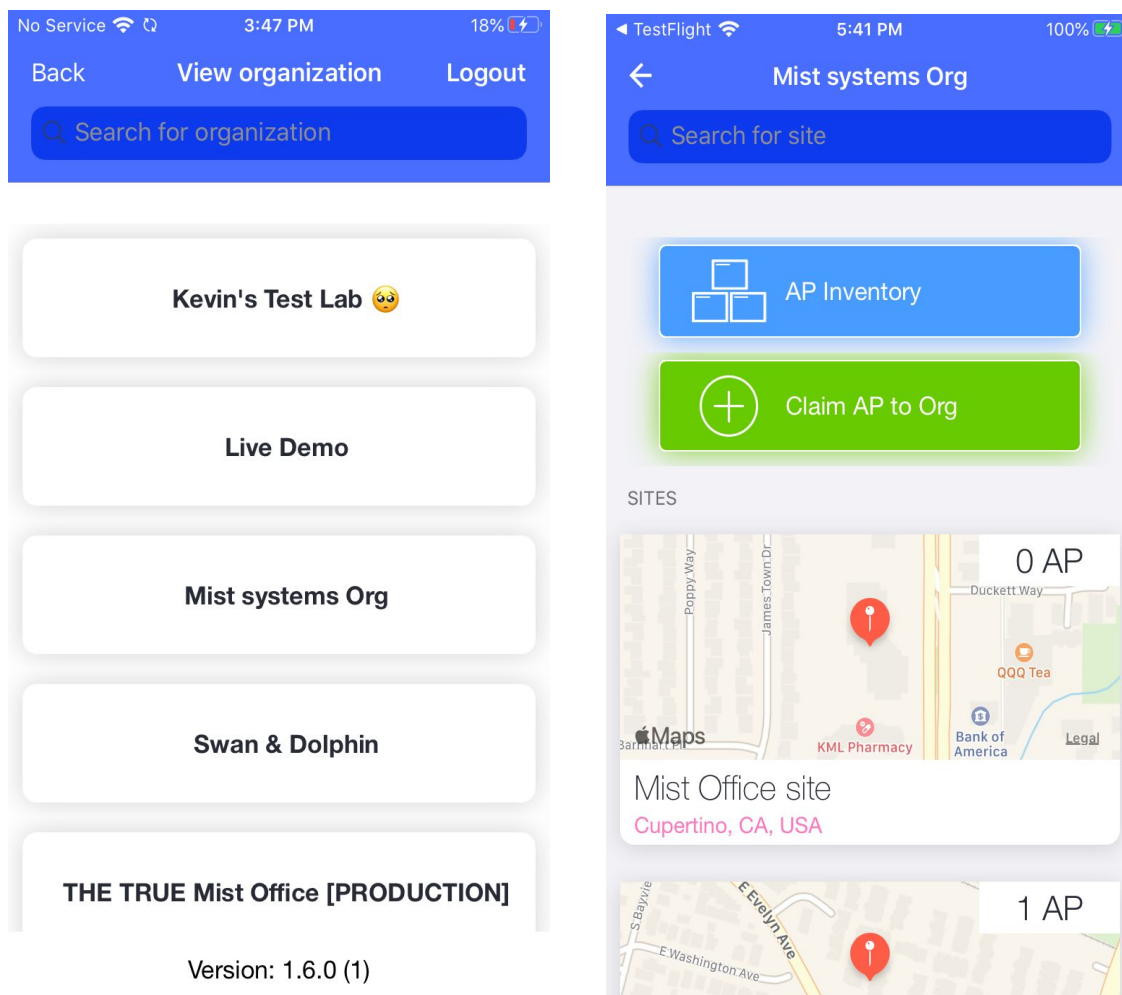


Org list and home screen page

AP Inventory

This is where you can see all "Assigned" and "Unassigned" APs on your org. Note this is currently from an org level, showing all APs from all sites under your org. You can also edit and search for APs.

Assigned APs: The assigned AP list has all the APs on the Org level which is already or recently added to the respective sites.


1. You can search for the name or mac address
2. You can edit the assigned list to unassign the APs from the site.

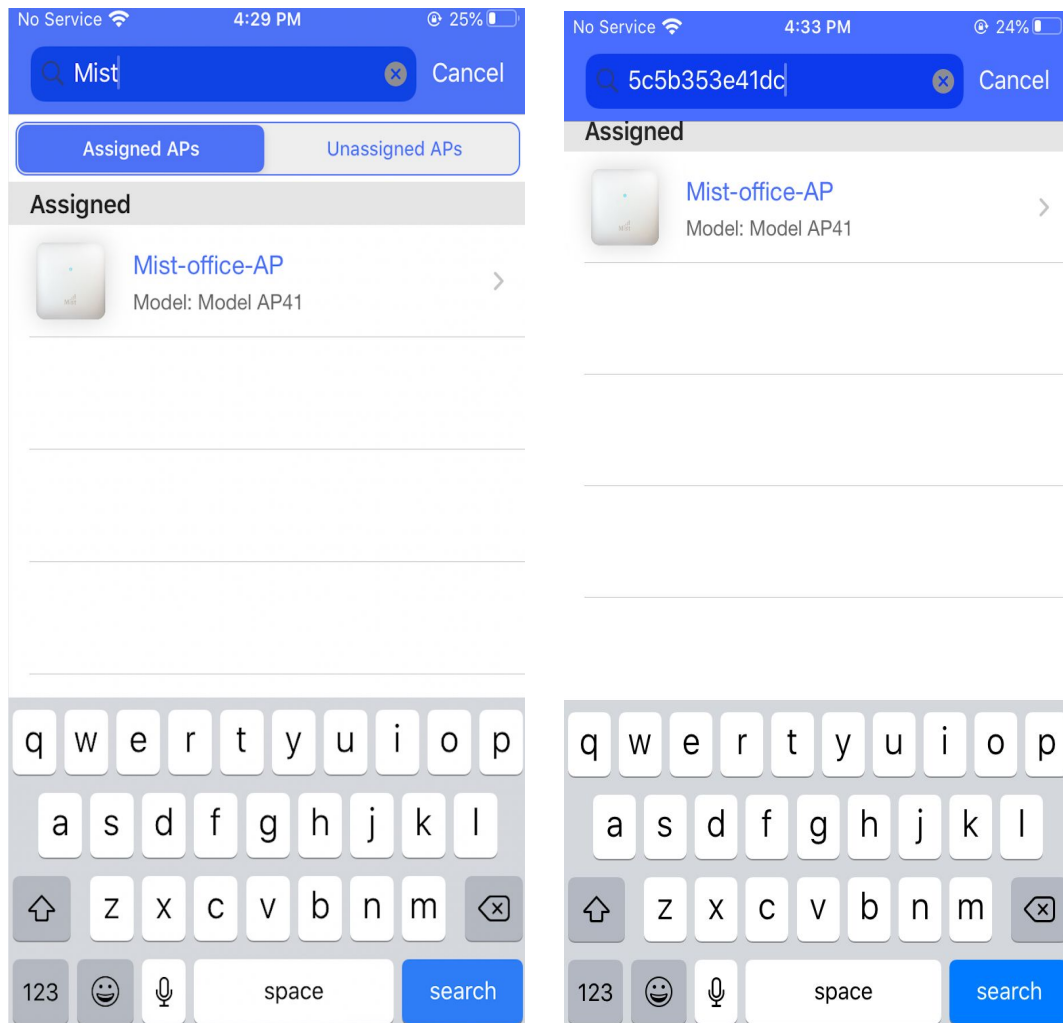

[Search by name or mac address](#)

Unassigned APs: The unassigned AP list has all APs claimed to the Org and not assigned to the site.


1. Similar to the assigned list, you can search for the name or mac address.
2. You can edit the unassigned list and assign the APs to the respective sites.
3. While assigning the AP to the respective site, you can search for the site from the site list.

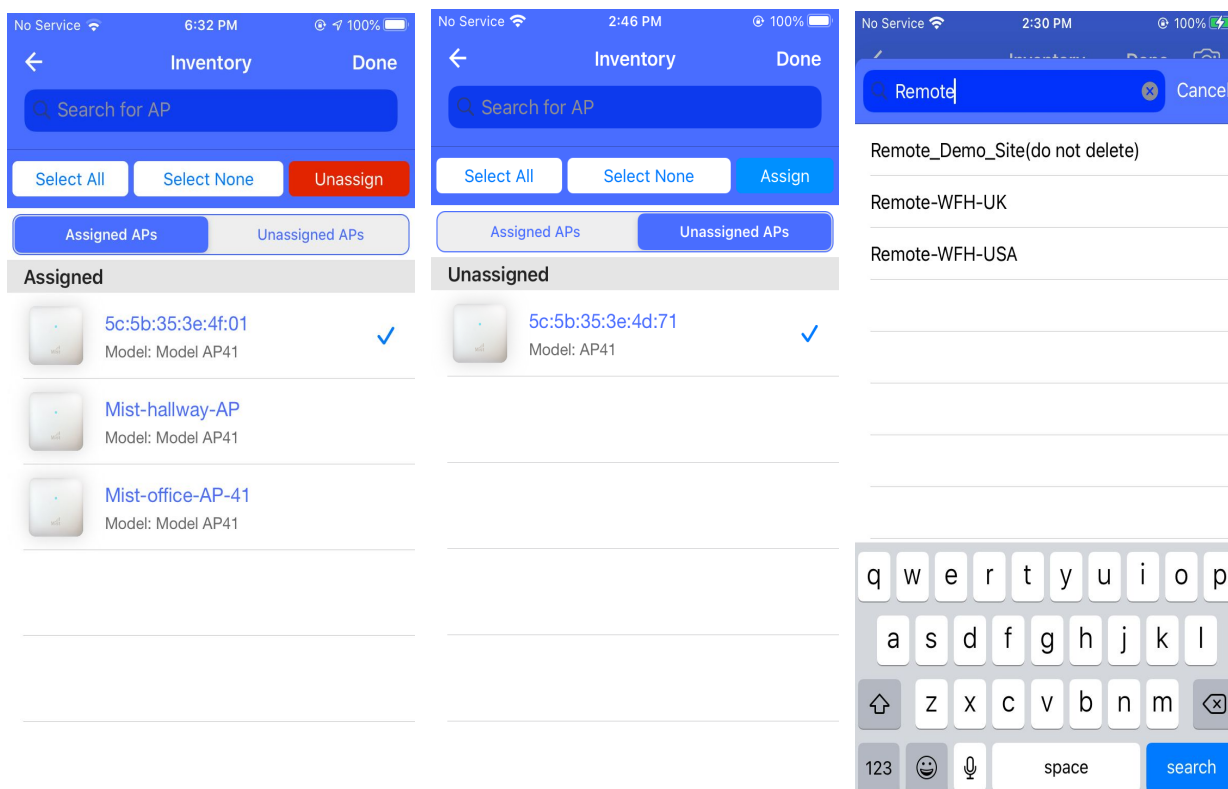

Assign/unassign APs and search site from AP inventory

Claim AP to Org




This is used to claim Access point by scanning the QR code on AP or enter the Claim code directly. After successfully claiming the AP to the Org, you can find the claimed AP in the AP inventory ➔ Unassigned AP list.

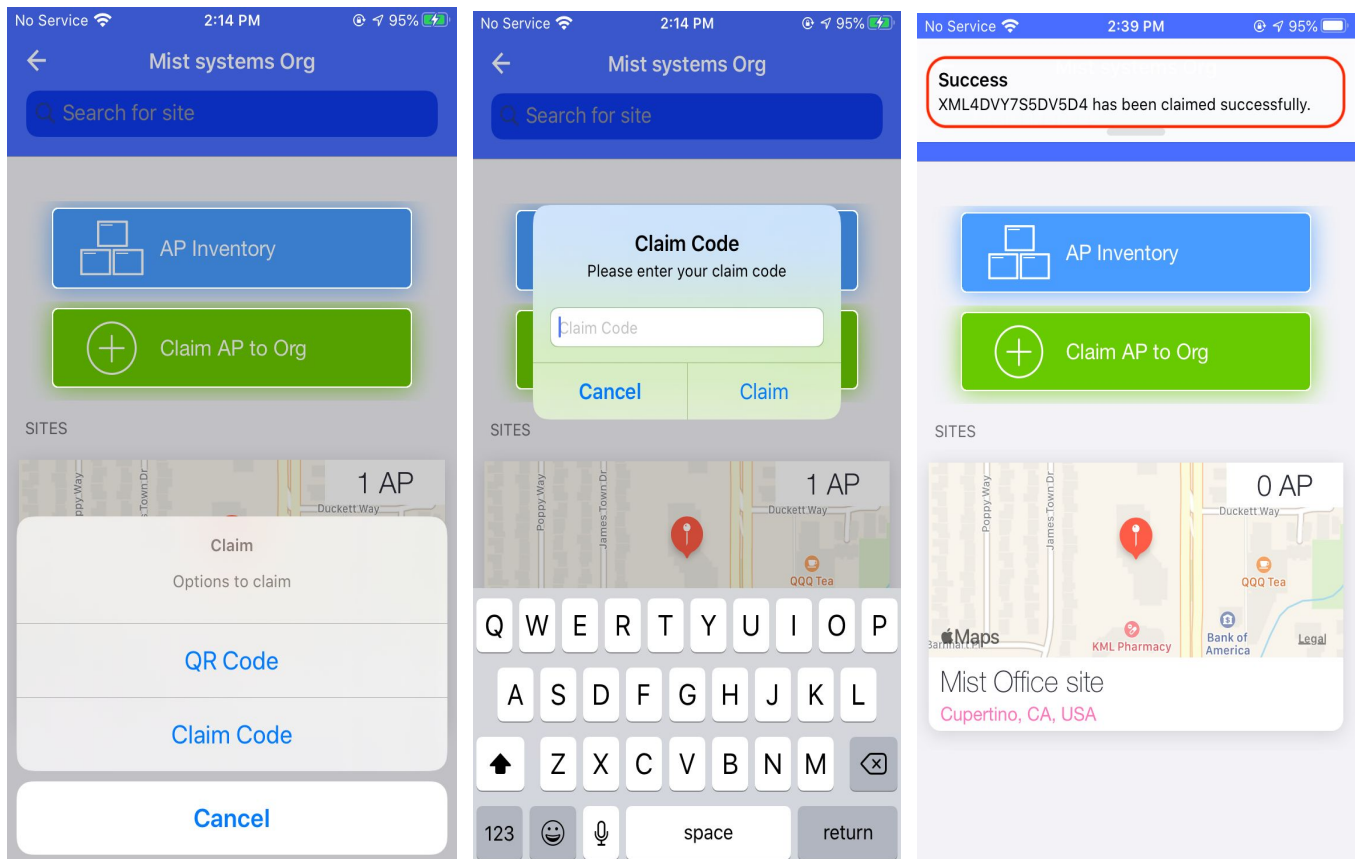

Claim AP to the org using QR code and Claim Code


Select Site

- At the bottom of the home page, you can see all the sites that are on the selected org. From here you can select which site to go into and what APs are claimed to that site and the maps that are associated with the selected site.
- Once you select your site you can see all the floor-plans at the bottom of the page. From here you can see the entire floor-plan and the current AP placements.
- You can then select the APs, make changes, and save. Whatever changes you make on the Mist AI app will reflect back in the Mist portal.

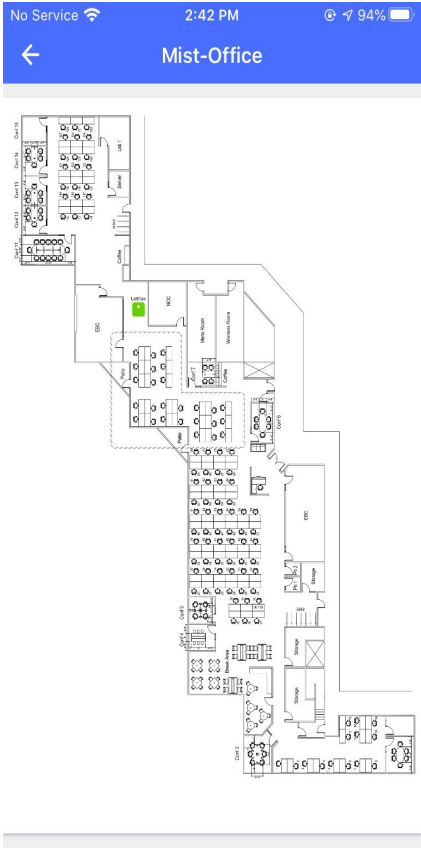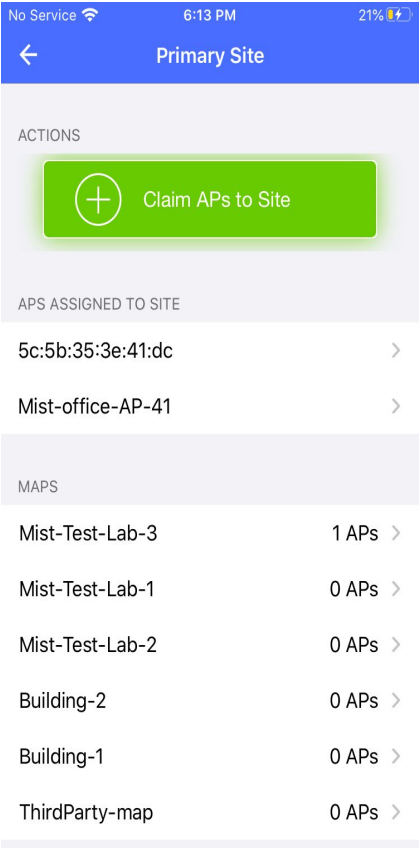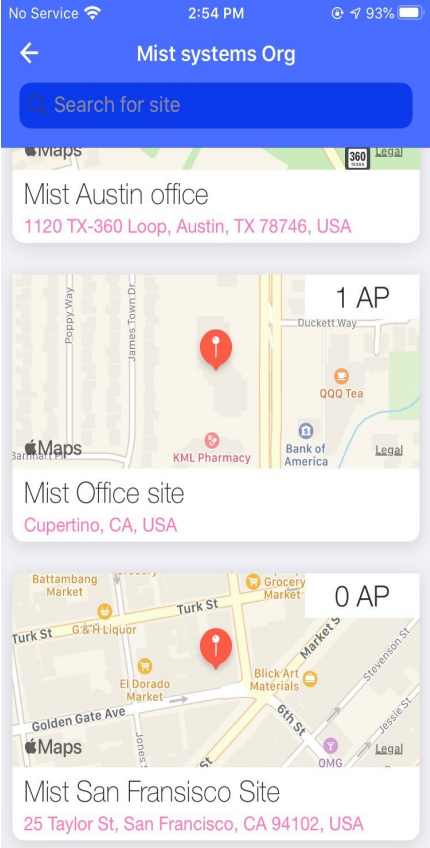

Select site from the home page, see all maps (floorplans), APs placed on the site and Map

- From here you can claim the AP to the site by scan the QR code on the AP or using claim code.

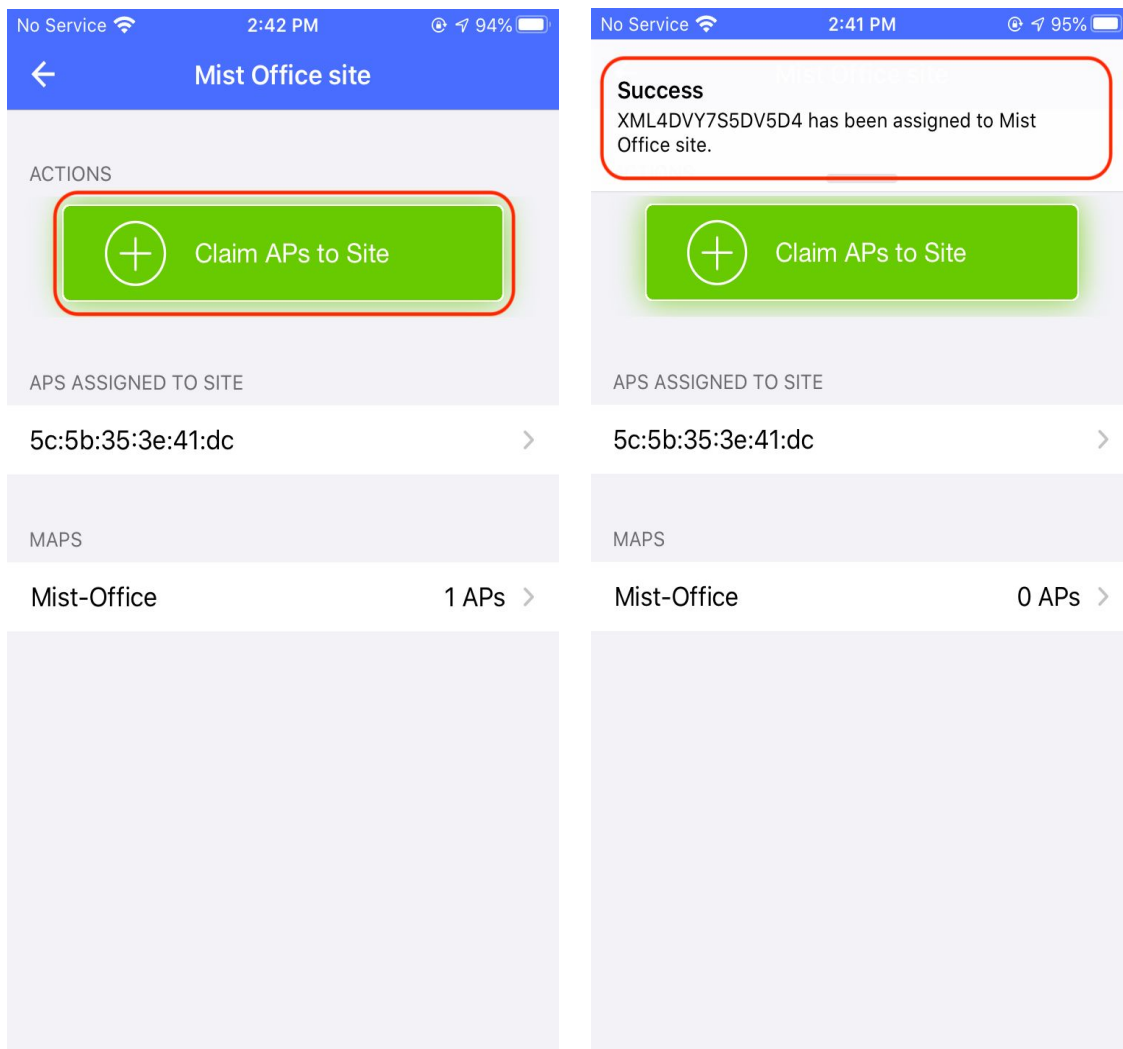

Claim or Assign AP to site

AP Details:

When selecting an AP from Site or AP inventory - Assigned list, you can navigate to the AP detail page. From here you can update the AP name, set it on the floor-plan, and edit both the placement and orientation of the AP.


Locate: This can be used to verify the AP placement. On click locate, the LEDs on the physical AP will start blinking green and purple. Unlocate will help stop blinking.

Name - Change the AP name. By default, the AP name would be mac address if not set.

Status - current AP status (**Connected** or **disconnected**)


Mac address - displays AP mac address

Map - if AP is not placed on a map, it will show "place on the map" otherwise, map name. You can place or Verify the AP location on the floor map.

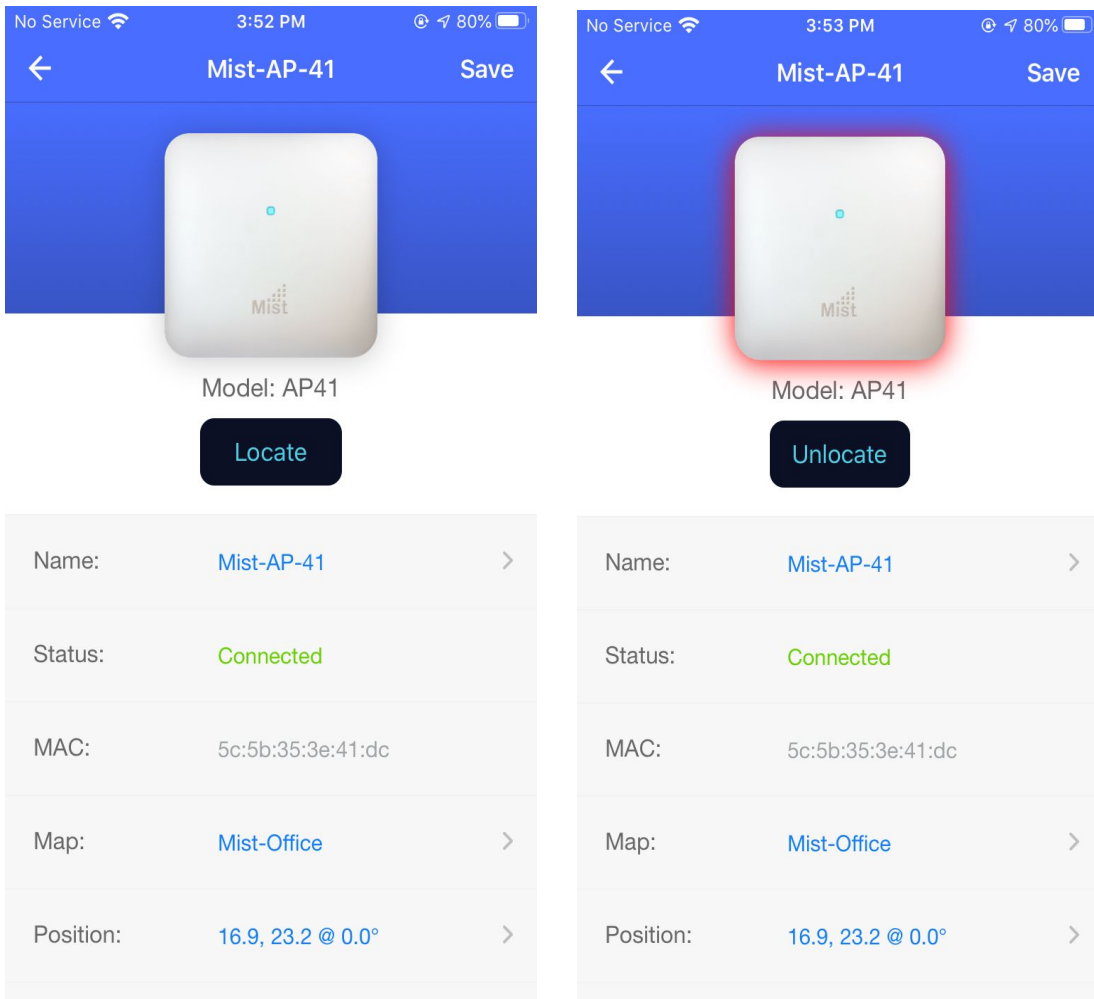

Locate and unlocate AP to verify AP location

Position: You can set it on the floor-plan and edit both the placement and orientation of the AP, push "Set" to save, and apply the changes.


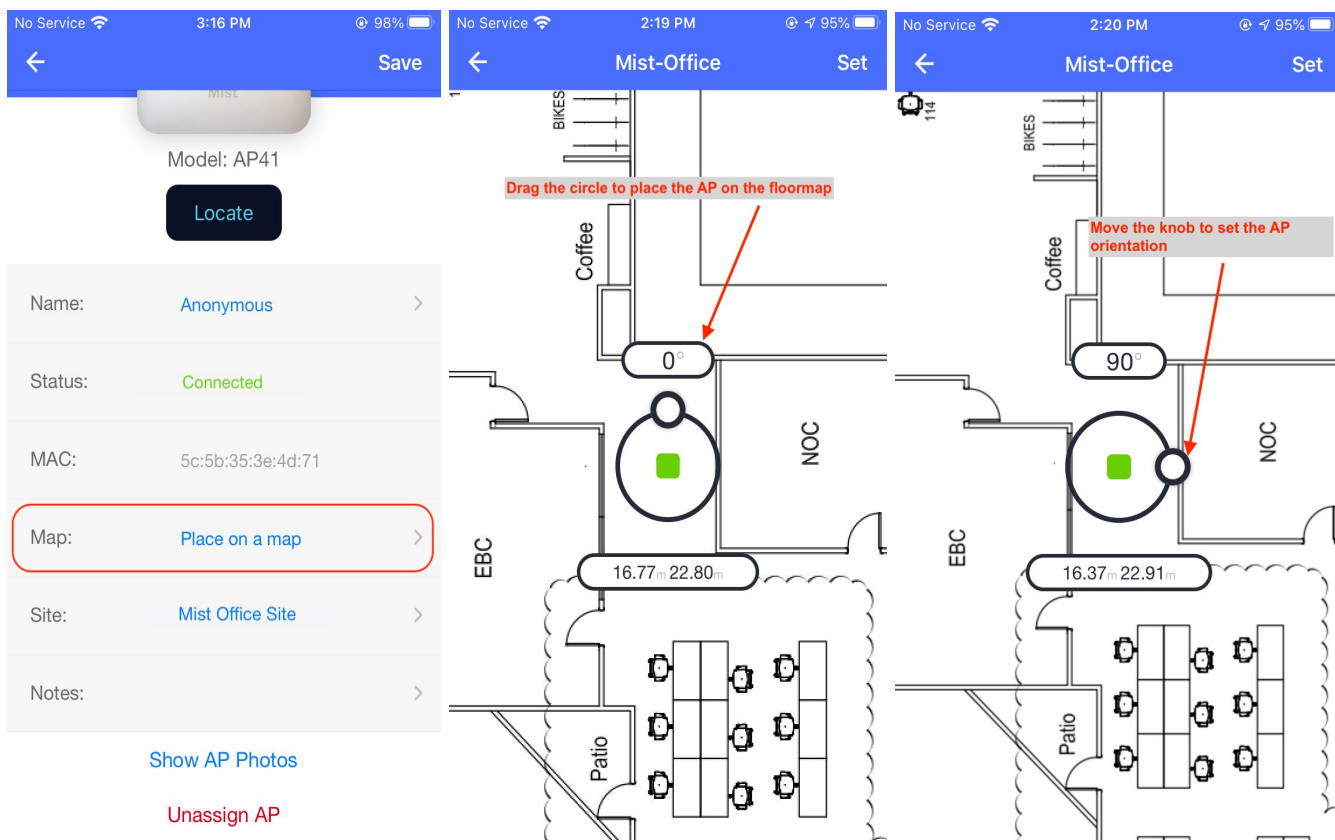


Place on the floor map, set AP position and orientation

Height: You can change the AP height in meters or feet. By default, the height is set to 2.75m.

Site: Show the site to which the AP is assigned.

Notes: You can add notes to mark down troubled areas.

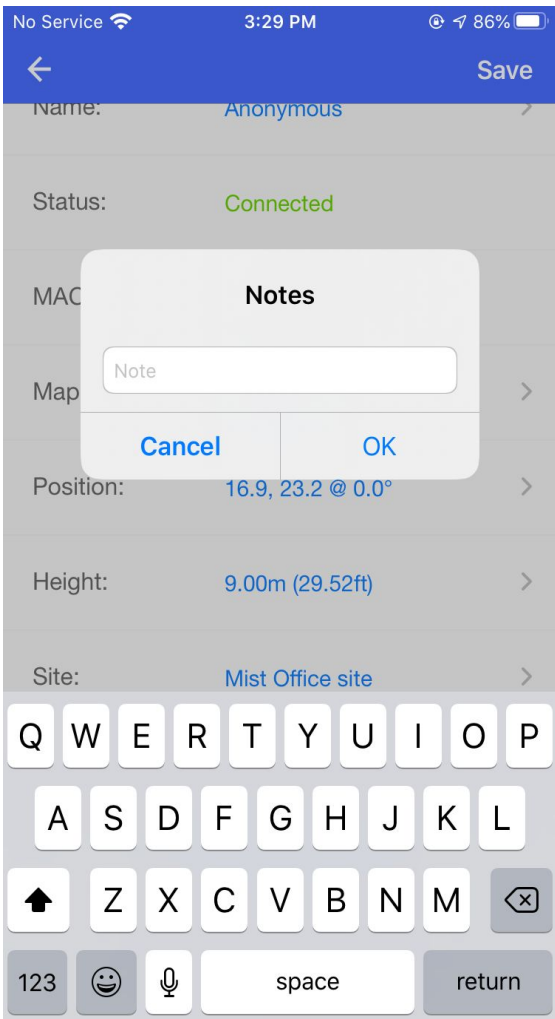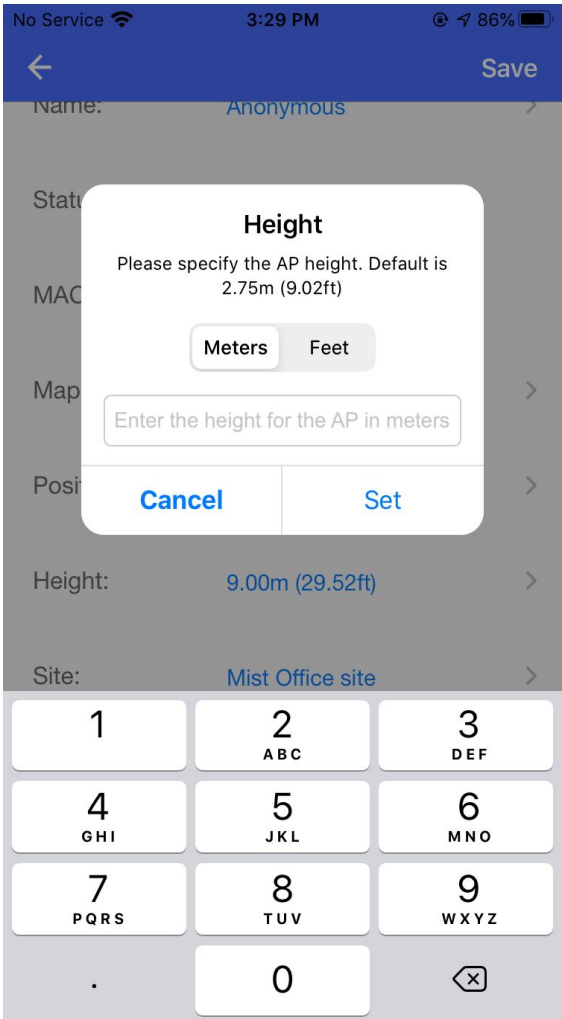


Set AP height in meters or feet and add notes

Show AP Photos: You can upload up to 3 photos. This will also reflect on the Mist UI dashboard.

Remove from map: This will remove the AP from the floor map. However, AP will still be in the assigned AP list.

Unassign AP: This will remove the AP from the site and move it to the unassigned AP list in the AP inventory.



0 selected photo(s)

Delete

